
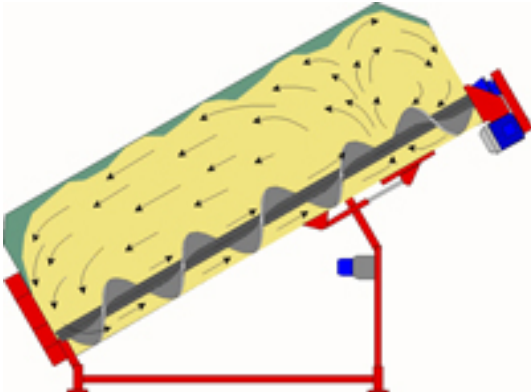


august 26, 2021

Picture of the machine (YDS 4)	
Machine number	1065-109 (4 m ³), 1065-110 (6 m ³), 1065-111 (8 m ³)
Custom tariff number	84369900
Machine paint	Standard ISO 12944-5 category C2. Machines, guards etc. comes in a color type RAL 3001 red suitable for indoor, non corrosive environment - water and oil resistant -15 to + 60 degrees C, surface purified with alkaline degreaser, painted with a machine primer and here after coating paint.
Standard	DS/EN 60204-1:2006 Safety of Machinery - Electrical Equipment of Machines, DS/EN ISO 13850 of January 29th 2007 emergency stop, DS/EN ISO 13849-1 safety-related parts of control systems, DS/EN 60204-1: 2006, cable installation method E
Machine function	<p>The material is filled into the rear of the machine. The single Ø 500 augers transport the material to the top. At the top is the material either taken out or reversed to the back of the machine by the mole-hill in the top.</p>  <p>The machine can also be placed on load cells with a weight control</p>

Machine use/purpose	Application	Mixing	Feeding into
	Pre mixer	Granulates, straw, oil... not acid silage	Transport augers, conveyors, other mixer directly
	Bedding system	Straw and disinfection powder, chalk, saw dust...	Chain conveyor Ø60 and bigger & pneumatic Blowing systems
	Buffer bin	-	Transport augers, conveyors, other mixer directly
RISK ASSESMENT Machine	The machine can be used as a “stand alone” machine and is therefore also delivered with a CE marking and conformity declaration.		
EN/ISO 13849-1	Safety levels: PLr: a, as machine with manual start PLr: c, as machine with automatic start if access is possible and not restricted.		

Analyzed risk following EN-ISO 13849-1:	S	F	P	PLr
1. Mounting: The machine is provided lifting positions that ensures balance when lifting and strong enough to hold machine load. Follow instruction from the manual, when mounting the machine. Work place assessment should be made, before start with mounting.	S2	F1	P1	c
2. Operating: a. In automatic: The machine has to be mounted following the instructions and guidance in the manual. It should not be possible to enter the mixer accidental, this means the mixer cannot be placed in a lower level than the level the filling device is driving in, unless separate risk assessment is made for this.	S2	F1	P1	c
b. In manual with front loader: The machine must be specific ordered for this and placed on same floor level as the loader is driving, to prevent accidental entering of the machine.	S2	F1	P1	C
3. Servicing: a. All lubrication positions are from a safe position.	S1	F1	P1	A
4. Renovation: a. Change of knives/dossetting bolts inside the machine can happen. To change knives one has to enter the machine. Access into the machine is provided back end by opening door, or just over the end. Before entering the machine must be turned off on the main switch and locked. Any filling device must also be turned off. Work place risk assessment should be made.	S2	F2	P1	D
b. Oil change on the main gear must be made from a build up platform suitable for the job. Work place risk assessment should be made	S1	F1	P1	A
5. Scrapping/recycling: same comment as under 1. Mounting	S2	F1	P1	C

Data Sheet:

YDS Mixer & Buffer



august 26, 2021

